


# DOW CORNING / SSI - XJS JOINT SYSTEM


METRIC DETAIL FOR NEW COSTRUCTION

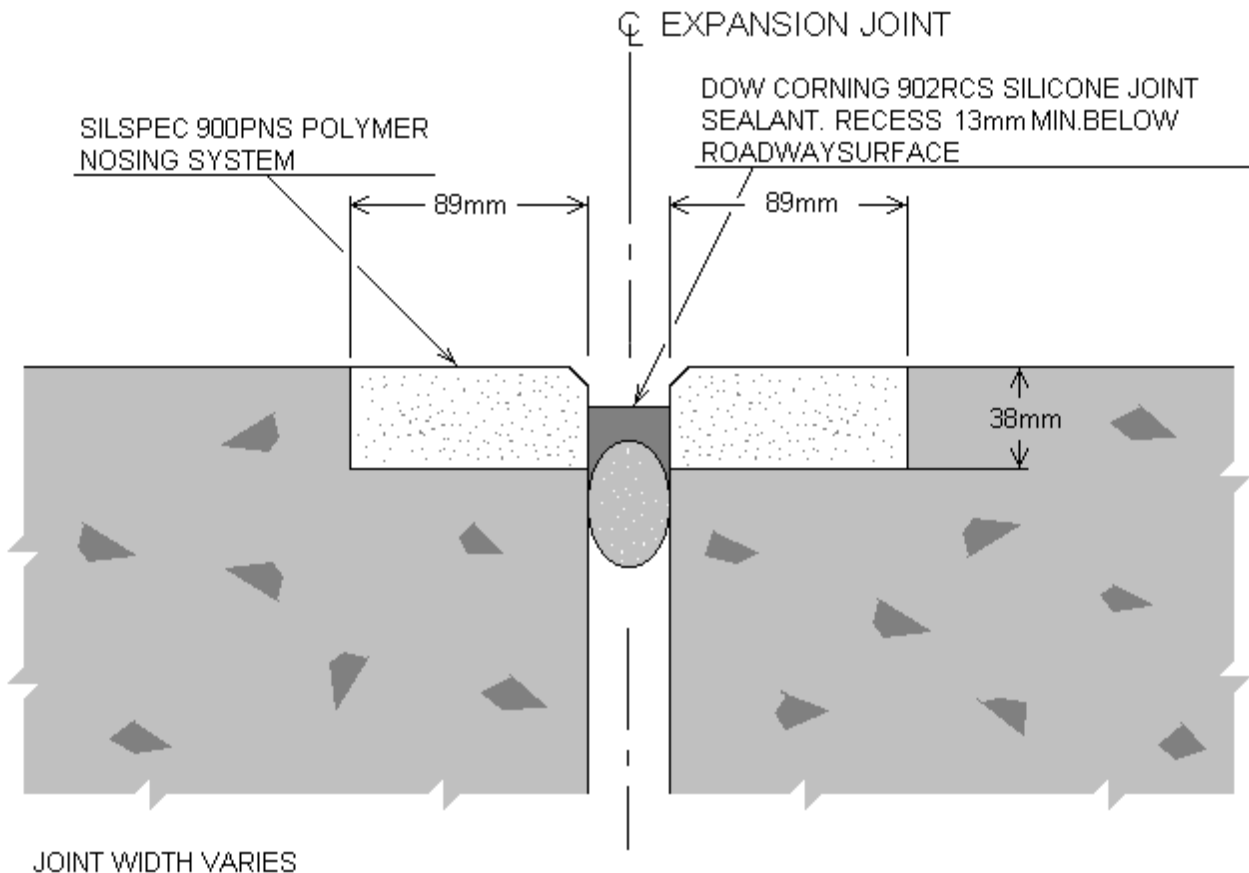

**CONSTRUCTION NOTES:**

- 1) FORM A 1-1/2" X 3-1/2" BLOCK-OUT IN THE CONCRETE ON BOTH SIDES OF THE JOINT OPENING.
- 2) ALL CLEANING AND INSTALLATION PROCEDURES SHALL CONFORM TO SPEC. DATA SHEETS FOR SILSPEC 900PNS AND DOW CORNING 902RCS.
- 3) ANY SPALLS IN CONCRETE FACES SHALL BE FILLED WITH SILSPEC 900PNS.
- 4) SEAL NEW JOINT WITH DOW CORNING 902RCS FOLLOWING RECOMMENDED PROCEDURES.
- 5) A REPRESENTATIVE OF THE MANUFACTURER SHALL BE PRESENT AT START OF WORK TO DEMONSTRATE PROPER CLEANING AND INSTALLATION PROCEDURES.

**BEVEL DETAIL**

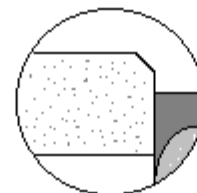

EDGES OF SILSPEC 900PNS SHALL BE GROUND TO 9mm X 9mm BEVEL.

SSI Construction & Industrial Materials  
 P.O. Box 50009  
 Tulsa, OK. 74150  
 (918)587-5567

TITLE: METRIC	
XJS SYSTEM, NEW CONSTRUCTION DETAIL	
DATE: 2/1/2000	DRW#: 1 OF 1
PROJECT:	
CONTRACTOR:	
XJS U.S. PATENT # 5,190,395	DRAWING NOT TO SCALE